**Cover Page**

- **Title**: "Yokaizer" (ヨーカイザー)
- **Subtitle**: "Instruction Manual" (取扱説明書)
- **Main Slogan**: "A world of adventure expands as you walk!"
- **Manufacturer**: Bandai
- **Recommended Age**: 6 years and up




**Left Side (Story Introduction):**

- "Long ago, there was light in the world, and darkness was kept at bay..."
- This is the story of beings who lived in balance with nature. They helped each other and flourished, sometimes being friends, and sometimes rivals.
- However, technological advances caused this balance to break, leading to the emergence of monsters called "Yokai Kids," who began spreading darkness in the world.
- The Yokai Kids continue to hide in modern society, blending in with the shadows.
- Use the Yokaizer device to maintain peace by capturing these Yokai Kids and keeping them under control. The world depends on you!

**Right Side (Contents):**

1. Names of the Parts ..... Page 3
2. Explanation of the Screen ..... Page 5
3. How to Play ..... Page 6
    - Setting the Time and Date
    - Selecting the Starting Region
    - Yokai Kids Encounter and Capture
    - Region Movement
4. Explanation of Each Mode ..... Page 10
    - Capture Mode, Party Game Mode, etc.
5. Battery Replacement Guide ..... Page 21

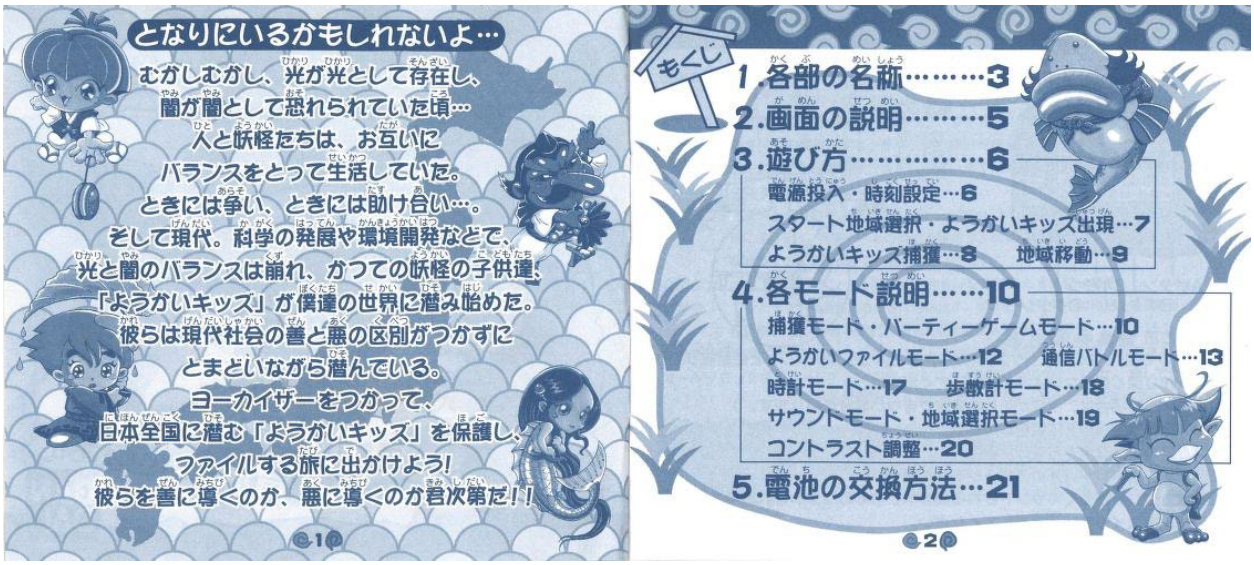


**Left Side (Names of the Parts):**

- **Diagram of the Device**:
  - **A Button, B Button, C Button, D Button**: Used to navigate menus and perform various functions.
  - **Communication Connector**: Used to communicate with other players or compatible devices.
  - **All-Reset Button**: Resets the device if it malfunctions.
  - **Mounting Clip and Vibration Sensor Adjustment Switch**: Attach this securely to a belt or pocket for accurate step counting during gameplay.
- **Attachment Instructions**:
  - Attach the device to a belt or pants securely using the mounting clip. For accurate step tracking, make sure the device is positioned properly. Walking or jogging while attached will help count your steps in the game.

**Right Side (Button Functions and Notes):**

- **Basic Button Functions**:
  - **A Button**: Selects options or confirms choices in menus.
  - **B Button**: Cancels choices or moves back in menus.
  - **C Button**: Adjusts the screen contrast to improve visibility.
  - **D Button**: Initiates the game mode or resets contrast settings.
- **Auto Power-Off Feature**:
  - The device will automatically power off after approximately 3 minutes of inactivity to save battery. To wake it up, press any button.

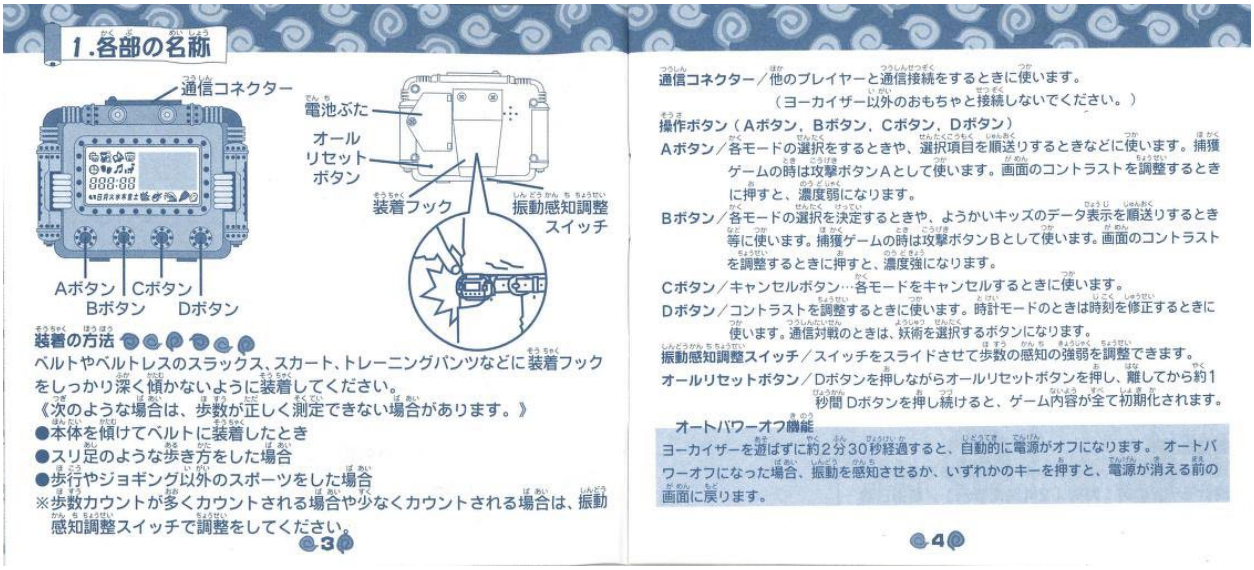


**Left Side (Explanation of the Screen):**

- **Main Screen Elements**:
  - **Operation Icons**: Icons displayed at the top indicate the active mode or status of the game. Each icon represents a different function:
    - Capture Icon, File Icon, Clock Icon, Step Count Icon, Sound Icon, etc.
  - **Value Display Area**: Displays numbers related to game progress, such as the current step count, date, and time.
  - **Battery and Warning Icons**: Shows battery life and any system warnings.
- **Days of the Week and Element Icons**:
  - The lower section of the screen shows the current day and various elemental icons:
    - Wood, Fire, Water, Metal, Earth – these represent different types of Yokai Kids associated with these elements.

**Right Side (How to Play):**

1. **Initial Setup**:
   - Remove the protective sheet from the battery box, then press the reset button to activate the device. After resetting, the screen will turn on, and a melody will play.
   - If the screen does not display properly, press the All-Reset button to refresh the display.
2. **Setting the Time and Date**:
   - Use the A Button to select the Clock Icon and press the B Button to confirm. Adjust the time and date by pressing the A and B buttons. Confirm the settings with both buttons simultaneously.

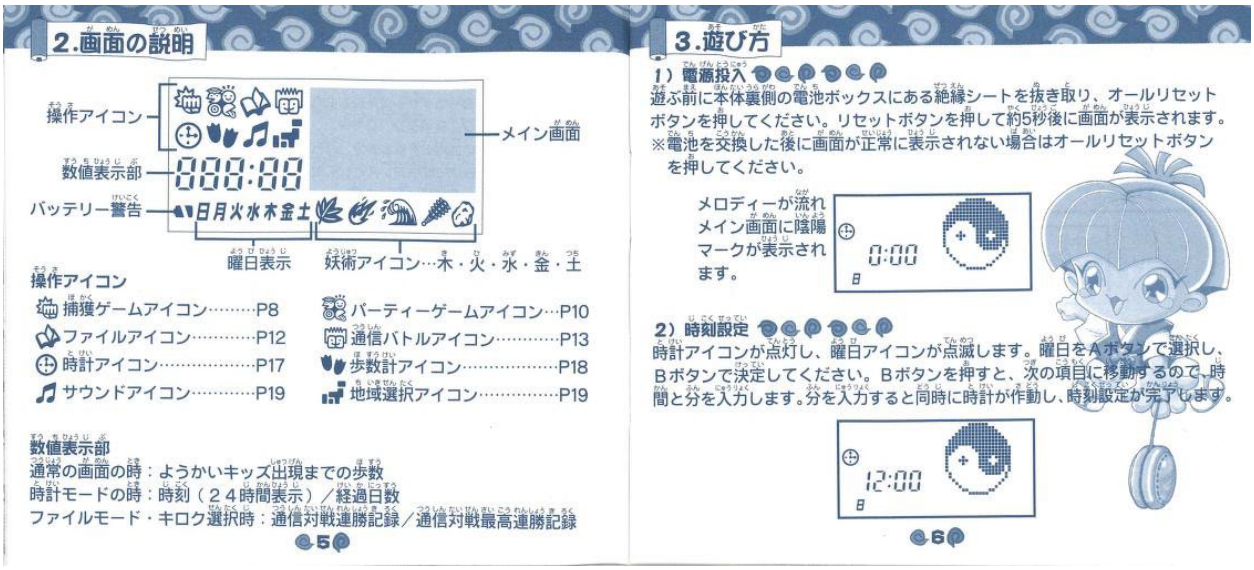


**Left Side:**

3. **Selecting the Starting Region**:
    - After setting the time, the game will automatically proceed to the screen for selecting your starting region.
    - Use the A Button to choose a region, then press the B Button to confirm. Once selected, a message will appear welcoming you to the Yokai Kids adventure.
4. **Yokai Kids Encounter**:
    - The screen will display an image of a Yokai Kid when one is encountered. The number display area will show a countdown, indicating how many steps remain before the Yokai Kid appears.

**Right Side:**

5. **Capturing Yokai Kids**:
    - When a Yokai Kid appears, press the A Button to activate Capture Mode, then press the B Button to confirm. A selection screen will show two options: "Attack" or "Evade."
    - Choose "Attack" by pressing A to start the capture game. Successfully capturing a Yokai Kid adds them to your file collection.

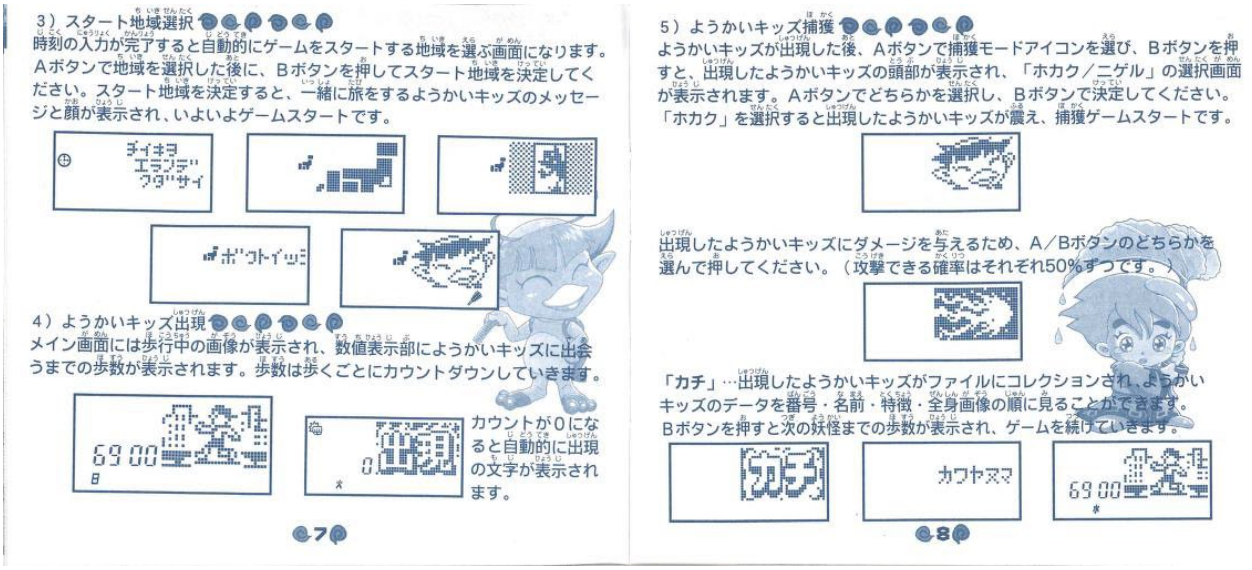
「マケ」…捕獲失敗です。出現したようかいキッズが逃げ去る画像が表示され、自動的に次の妖怪までの歩数が表示されます。



6）地域移動

捕獲ゲームを繰り返し、地域に潜むボスようかいキッズを捕獲すると、自動的に地域選択画面になります。Aボタンで新しい地域を選び、Bボタンで新地域決定となります。

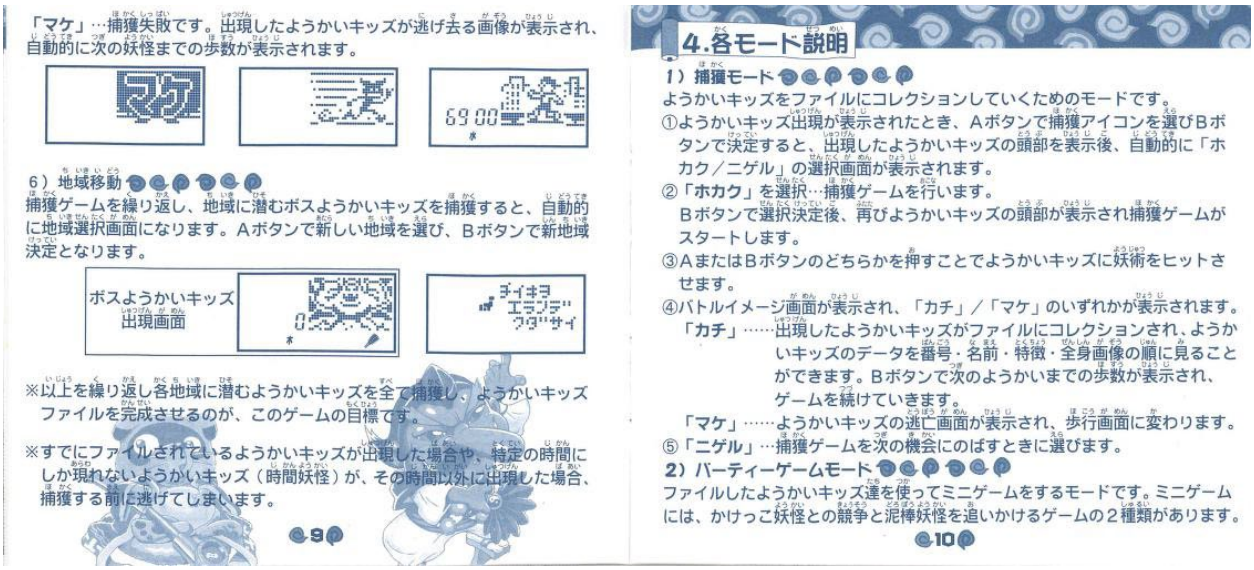

※以上を繰り返し各地域に潜むようかいキッズを全て捕獲し、ようかいキッズファイルを完成させるのが、このゲームの目標です。

※すでにファイルされているようかいキッズが出現した場合や、特定の時間にしか現れないようかいキッズ（時間妖怪）が、その時間以外に出現した場合、捕獲する前に逃げてしまいます。



## 4.各モード説明

1）捕獲モード

ようかいキッズをファイルにコレクションしていくためのモードです。

①ようかいキッズ出現が表示されたとき、Aボタンで捕獲アイコンを選びBボタンで決定すると、出現したようかいキッズの頭部を表示後、自動的に「ホカク／ニゲル」の選択画面が表示されます。

②「ホカク」を選択…捕獲ゲームを行います。
Bボタンで選択決定後、再びようかいキッズの頭部が表示され捕獲ゲームがスタートします。

③AまたはBボタンのどちらかを押すことでようかいキッズに妖術をヒットさせます。

④バトルイメージ画面が表示され、「カチ」／「マケ」のいずれかが表示されます。
「カチ」……出現したようかいキッズがファイルにコレクションされ、ようかいキッズのデータを番号・名前・特徴・全身画像の順に見ることができます。Bボタンで次のようかいまでの歩数が表示され、ゲームを続けていきます。
「マケ」……ようかいキッズの逃亡画面が表示され、歩行画面に変わります。

⑤「ニゲル」…捕獲ゲームを次の機会にのばすときに選びます。

2）パーティーゲームモード

ファイルしたようかいキッズ達を使ってミニゲームをするモードです。ミニゲームには、かけっこ妖怪との競争と泥棒妖怪を追いかけるゲームの２種類があります。



**Left Side:**

6. **Moving Between Regions**:
    - After capturing a Yokai Kid in one region, you'll have the option to move to a new region. Press the A Button to select a new area, and press the B Button to confirm.

**Region Types**:

- Different regions may contain unique types of Yokai Kids. Explore each area to complete your collection!

**Right Side (Explanation of Each Mode):**

1. **Capture Mode**:
    - This mode allows you to encounter and capture Yokai Kids. When a Yokai Kid appears, press the A Button to select "Capture Mode" and the B Button to start the game.
    - You can choose to "Attack" or "Evade." Success is indicated by the "Win" message, and the Yokai Kid will be added to your collection file.
2. **Party Game Mode**:
    - A special game mode that offers mini-games for added fun. Select a game by pressing A, then confirm with B.

---




**Left Side:**

2. **Party Game Mode**:
    - In Party Game Mode, different mini-games are available to play with Yokai Kids. Use the A Button to select a game, and press the B Button to start.
    - Some of the games include:
        - "Chase Game" where you run after Yokai Kids.
        - "Obstacle Avoidance Game" where you dodge obstacles as you move.
3. **Yokai Kids File Mode**:
    - This mode allows you to view data and records of Yokai Kids you've captured.
    - Use the A Button to select "File" or "Erase," then confirm with the B Button. This option displays captured Yokai Kids along with their stats and attributes.

**Right Side:**

4. **Communication Battle Mode**:
    - Connect with other players and enjoy battles between Yokai Kids.
    - In this mode, select the Battle Icon with the A Button, confirm with B, and then link your device with another player's Yokaizer. You'll be able to exchange data and compete in battles with their Yokai Kids.

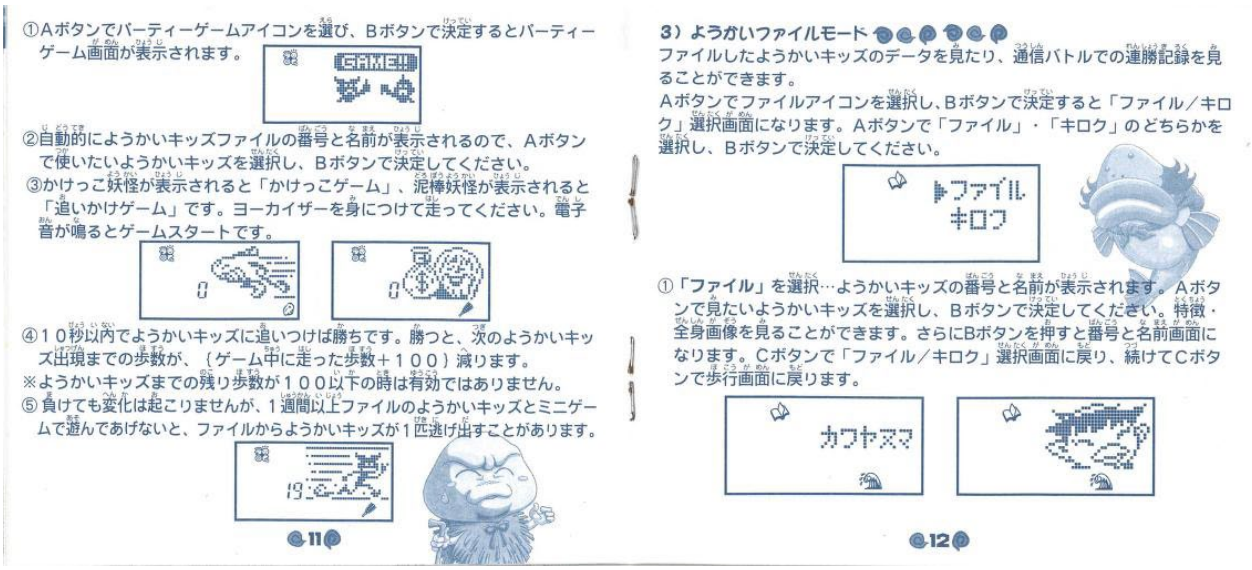---



②「キロク」を選択…「レンショウ／サイコウ」選択画面が表示されます。Aボタンでどちらかを選択してください。「レンショウ」を選択すると数値表示部に、通信バトルで、現在何連勝中かを表示します。
「サイコウ」を選択すると今までの最高連勝記録が表示されます。Cボタンで「ファイル／キロク」選択画面に戻り、更にCボタンで歩行画面に戻ります。

レンショウ 2
サイコウ 12

モード選択中も振動は感知し、ようかいキッズ出現までの歩数は減少します。

**4）通信バトルモード**

ファイルしたようかいキッズを使って、他のプレイヤーとの通信バトルを楽しむモードです。相手に勝つと対戦したようかいキッズのデータを手に入れて、ファイルすることができます。対戦に負けてしまうと使ったようかいキッズのデータは取られてしまいます。（そのようかいキッズをファイルした地域に戻れば、再び捕まえることができます。）

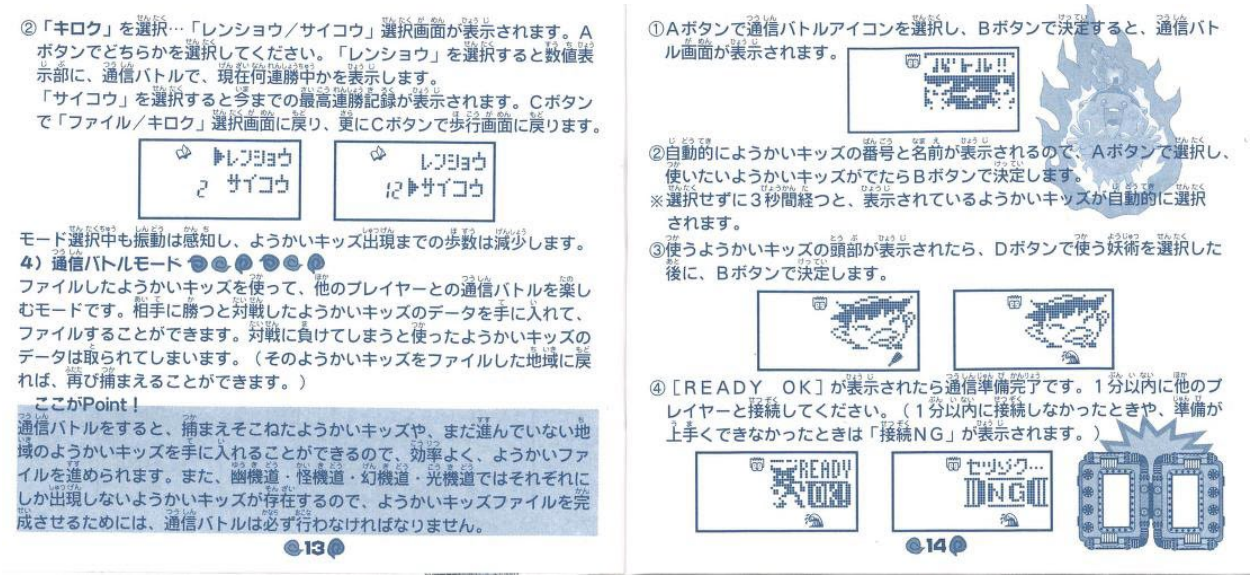**ここがPoint！**

通信バトルをすると、捕まえそこねたようかいキッズや、まだ進んでいない地域のようかいキッズを手に入れることができるので、効率よく、ようかいファイルを進められます。また、幽機道・怪機道・幻機道・光機道ではそれぞれにしか出現しないようかいキッズが存在するので、ようかいキッズファイルを完成させるためには、通信バトルは必ず行わなければなりません。

13

①Aボタンで通信バトルアイコンを選択し、Bボタンで決定すると、通信バトル画面が表示されます。

バトル!!

②自動的にようかいキッズの番号と名前が表示されるので、Aボタンで選択し、使いたいようかいキッズがでたらBボタンで決定します。
※選択せずに3秒間経つと、表示されているようかいキッズが自動的に選択されます。

③使うようかいキッズの頭部が表示されたら、Dボタンで使う妖術を選択した後に、Bボタンで決定します。

④［READY　OK］が表示されたら通信準備完了です。1分以内に他のプレイヤーと接続してください。（1分以内に接続しなかったときや、準備が上手くできなかったときは「接続NG」が表示されます。）

READY OK

セッツク... ING

14

**Left Side:**

5. **Clock Mode**:
    - This mode allows you to view the current time and set the clock if needed.
    - Use the A Button to select "Clock" and press B to confirm. You can toggle between options, and the current time will be displayed in 24-hour format.
6. **Step Counter Mode**:
    - Displays the total number of steps taken in the game.
    - Select the Step Counter Icon using the A Button and press B to confirm. You can view your daily step count, with a maximum display of up to 9,999 steps.

**Right Side:**

- **Additional Step Counter Options**:
    - "Total": Displays the cumulative step count.
    - "Reset": Resets the current step count to zero.

---


⑤接続したあと、どちらかのプレイヤーがDボタンを押すことでデータの通信が始まります。両方の画面に「ツウシンチュウ」が表示され、データの交信が終わると「接続ＯＫ」が表示されます。「接続ＯＫ」が表示されたら接続を外してください。



※「接続ＯＫ」の表示が出るまで、絶対に接続を外さないでください。また、双方に「ＲＥＡＤＹ　ＯＫ」が表示され、接続するまでDボタンを押さないでください。途中で外したりすると、通信が正常に行われず、普通にコレクションしていくこともできなくなる恐れがあります。

⑥自動的に対戦相手が用いた妖術が表示され、勝敗が決まります。

⑦「カチ」…ようかいキッズがやってくる画像が表示され手に入れたようかいキッズのデータが表示されます。Bボタンで歩行画面に戻ります。

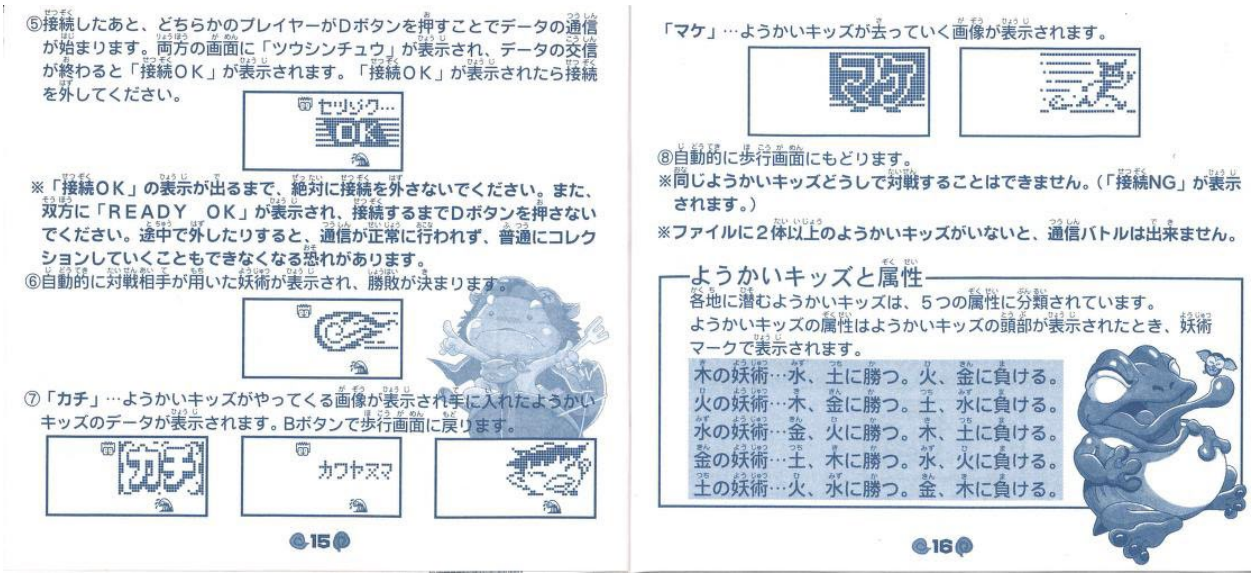



「マケ」…ようかいキッズが去っていく画像が表示されます。

⑧自動的に歩行画面にもどります。

※同じようかいキッズどうしで対戦することはできません。（「接続NG」が表示されます。）

※ファイルに２体以上のようかいキッズがいないと、通信バトルは出来ません。

## ようかいキッズと属性

各地に潜むようかいキッズは、５つの属性に分類されています。ようかいキッズの属性はようかいキッズの頭部が表示されたとき、妖術マークで表示されます。

木の妖術…水、土に勝つ。火、金に負ける。
火の妖術…木、金に勝つ。土、水に負ける。
水の妖術…金、火に勝つ。木、土に負ける。
金の妖術…土、木に勝つ。水、火に負ける。
土の妖術…火、水に勝つ。金、木に負ける。



**Left Side:**

4. **Using Communication Mode**:
    - In this mode, you can connect with another Yokaizer device to exchange data or battle with other players' Yokai Kids.
    - Select the Communication Icon with the A Button and confirm with B. The screen will display "READY" when it's set to connect with another device.
    - Press the D Button to start data exchange. Both players must press D to begin the transfer, indicated by "CONNECTED" on the screen.

**Right Side:**

- **Yokai Kids Attributes**:
    - Yokai Kids are associated with five elements: Wood, Fire, Water, Metal, and Earth. Each element has unique strengths and weaknesses against other elements.
    - When a Yokai Kid appears, its element icon will show on the screen. Use this to strategize your encounters.

---




**Left Side:**

5. **Clock Mode Continued**:
    - **"Total/Reset" Option**: This feature lets you view the total steps accumulated and reset it if desired.
    - Use the A Button to choose between "Total" and "Reset" options, then confirm with B to execute your choice.

**Right Side:**

6. **Additional Notes**:
    - **Resetting Data**: Resetting the device can clear step counts and certain game settings, but captured Yokai Kids remain in the file unless erased manually.
    - **Caution**: Ensure the device is properly secured to avoid losing data from accidental resets or drops.

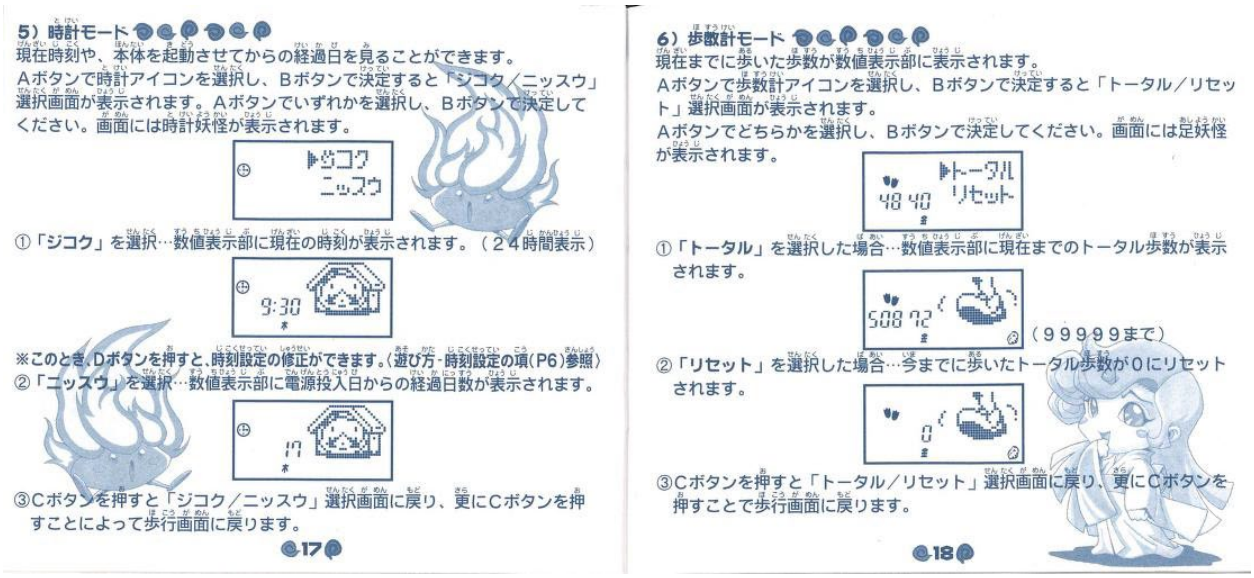


**Left Side:**

7. **Sound Mode**:
    - Use the A Button to select the Sound Icon, then press the B Button to confirm. You can toggle between "On" and "Off" for sound.
    - Press A to switch between options and confirm with B. This will return you to the main screen.
8. **Region Selection Mode**:
    - Once you've captured all Yokai Kids in a region, this mode lets you move to a new region.
    - Select "Start" with A, choose a region you want to move to, and confirm with B. Once confirmed, you'll automatically return to the main screen.

**Note**: If you cannot move to a new region, it means you haven't completed the current one. Finish capturing Yokai Kids in the current region to unlock new areas.

9. **Contrast Adjustment**:
    - Adjusts the screen contrast for better visibility.
    - Use the C Button to enter Contrast Mode, and A/B to adjust the level. Confirm with B to return.

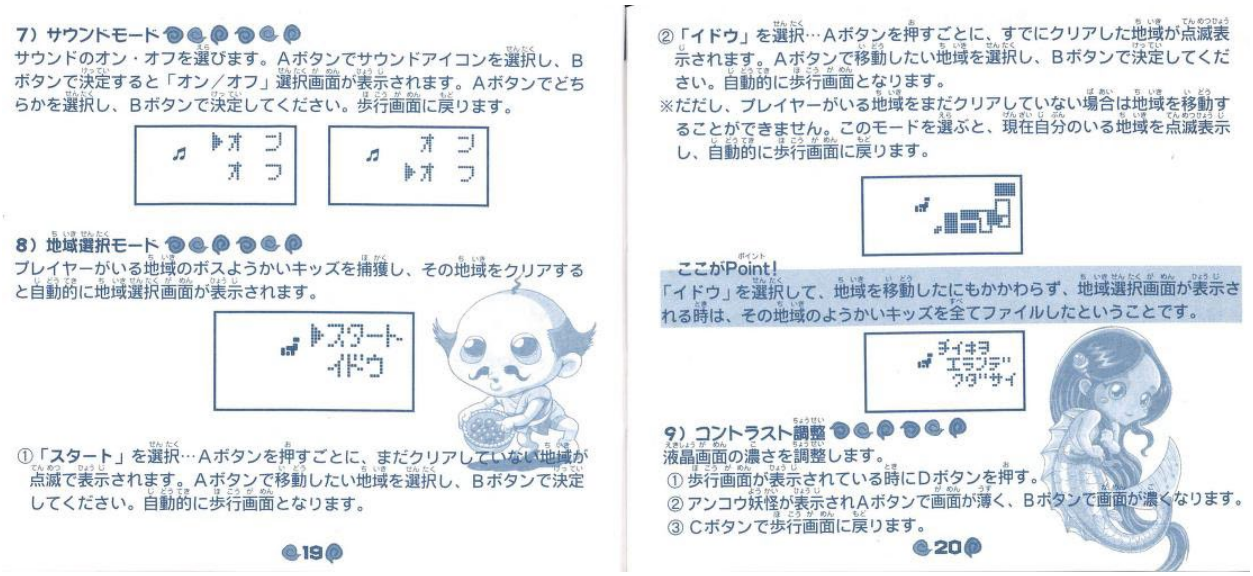---



## 5.電池の交換方法

電池の残りが少なくなると、バッテリー警告表示が点灯し、キー操作を受け付けなくなり表示が消えます。バッテリー警告表示が点灯したら、早めに電池を交換してください。（せっかく集めた妖怪のデータが消えてしまいます。）

※電池を交換する前に、下の注意文をよくお読みください。

①⊕ドライバーでビスをはずし、蓋をとります。

②ボタン電池（ＬＲ４４）を図のように⊕⊖を確認しながら入れ、蓋をしてビスをしめます。

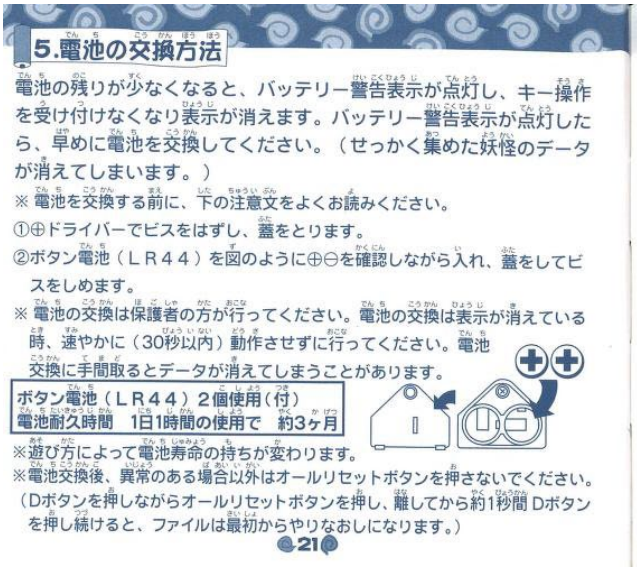※電池の交換は保護者の方が行ってください。電池の交換は表示が消えている時、速やかに（30秒以内）動作させずに行ってください。電池交換に手間取るとデータが消えてしまうことがあります。

ボタン電池（ＬＲ４４）２個使用（付）
電池耐久時間　1日1時間の使用で　約3ヶ月

※遊び方によって電池寿命の持ちが変わります。

※電池交換後、異常のある場合以外はオールリセットボタンを押さないでください。（Dボタンを押しながらオールリセットボタンを押し、離してから約1秒間 Dボタンを押し続けると、ファイルは最初からやりなおしになります。）

21



## ⚠ 注　意

保護者の方へ　必ずお読みください。

- **ボタン電池（ＬＲ４４）、電池ぶた、ねじなどの誤飲事故（特に３才未満のお子様）に注意してください。**
《電池を誤使用すると発熱・破裂・液もれの恐れがあります。下記に注意してください。》
- **電池（ＬＲ４４）の交換は保護者の方が行ってください。**
- **古い電池と新しい電池、いろいろな電池を混ぜて使わないでください。**
- ⊕⊖（プラスマイナス）を正しくセットしてください。
- ショートさせたり充電、分解、加熱、火の中に入れたりしないでください。
- 万一、ボタン電池（ＬＲ４４）を飲み込んだとき、ボタン電池（ＬＲ４４）からもれた液が目に入ったときはすぐに医師に相談してください。もれた液がひふや服に付いたときは水で洗ってください。

〈使用上の注意〉

●本商品は精密な電子部品で構成されています。落としたり、水に濡らしたり、汚したり、分解したりしないでください。また高温・低温になる所での使用、保管はさけてください。

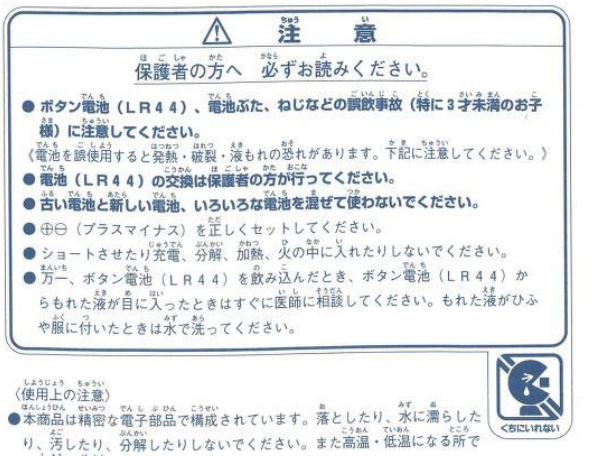くちにいれない

**Left Side:**

5. **Battery Replacement Instructions**:
    - When the battery is low, a warning icon will appear, and the buttons may stop responding. Replace the battery promptly to avoid losing your game data.
    - Before replacing the battery, please read these instructions carefully.
    - **Steps**:
        1. Use a screwdriver to open the battery compartment.
        2. Remove the old batteries (LR44 type) and insert two new LR44 batteries with the correct orientation.
        3. Close the cover and secure it with the screw.
    - **Note**: Replacing the battery will reset step count data. However, captured Yokai Kids will remain saved unless you perform a full reset.

**Right Side:**

- **Warning for Guardians**:
    - Please read carefully. Button batteries can be hazardous if swallowed, especially for small children.
    - Be careful to insert the batteries in the correct orientation. Do not recharge non-rechargeable batteries.
    - If the device malfunctions after battery replacement, try pressing the reset button.

---

**Left Side:**

**Bandai's Commitment:**

- At Bandai, we are dedicated to delivering safe and enjoyable toys through continuous research, testing, and improvements. Due to manufacturing variations, individual units may differ slightly. Thank you for your understanding.

**Customer Support**:

- If you encounter any issues with this product, please contact our customer service center.